



Custom Built PC Desktop Disassembly

MAINTENANCE MODULE PC - PDF IN SPANISH I HOPE THEY SERVE

Written By: JUAN ORREGO




Step 1 — Custom Built PC Desktop Disassembly



- **Cover Removal:** Follow these steps to remove the cabinet cover: 1. Turn off the system. Disconnect all cables on the back of the cabinet, including the power cables. 2. Examine the cabinet to determine how to remove the cover. Remove the screws holding the cover to the chassis.

Step 2

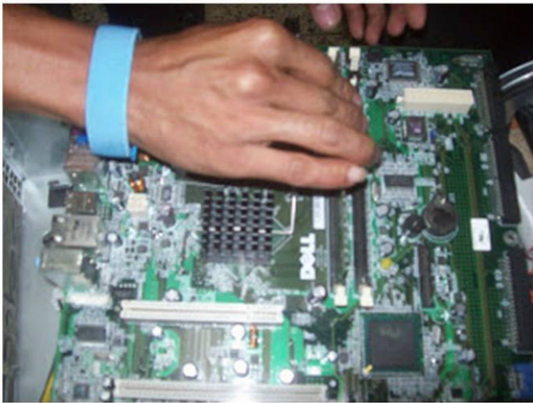

- **Retirement cards:** Note in which slots are each adapter; 2. Remove the screw that secures the adapter. 3. Note the positions of all cables you may have before removing the adapter. 4. Remove the lifting with equal force on both ends adapter. 5. Note the positions of all switches on the card

Step 3




- Retirement Drives: The procedure is similar for all types of units, such as floppy disk, hard disk, CD-ROM, Zip drives, etc.

Step 4



- Removing the source of power: The power supply is mounted on the system with several screws (usually four) on the back - remember to remove the screws and disconnect the cables from the source to the motherboard

Step 5 — RETIREMENT CARD

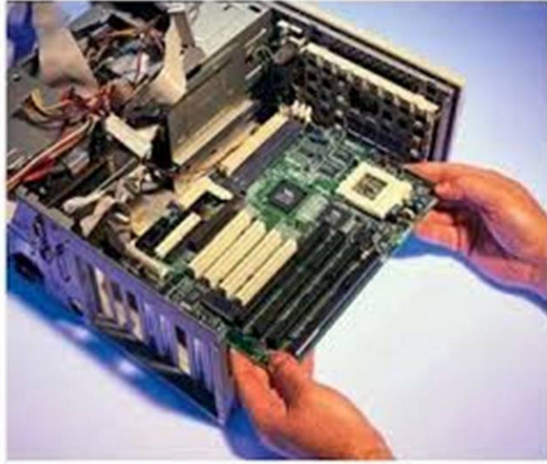

- Removing the motherboard: After removing all adapter cards system, you can remove the motherboard, which, usually is held by several screws and plastic holder can use card that raise the metal chassis.

Para reensamblar tu dispositivo, sigue estas instrucciones en orden inverso.

This document was last generated on 2017-06-19 07:54:16 AM.